 


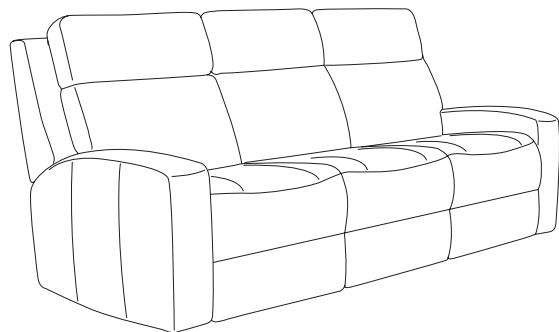

Flint 3 Seater Lounge

⚠ The components are heavy, assembly should be performed by two people.

If you have any difficulty with assembly or operation, please contact the store of purchase in the first instance.

Please read the below safety & electrical instructions before operating

Safety Instructions

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Ensure there is no person, animal or item obstructing the area under the footrest before operating this product.
- Improper use or installation may result in the risk of fire, electric shock and/or injury. We assume no liability for any eventual damages caused by improper use or inappropriate handling, or by any other non-compliance with the instructions in this manual.
- Children should be supervised to ensure that they do not play with the product.
- This product contains moving parts. Keep fingers, hair and body parts well clear from moving parts. To reduce the risk of injury, keep children and pets clear of the product when in use.
- Do not sit or place additional weight on the arms, back or open footrest.
- This product is very heavy. Only move this product by lifting the main body. Never drag by the footrest, back or arm rest.
- Return this product to the full upright position to stand safely and prevent a tripping hazard.
- Do not operate this product if damage is visible in any form.
- Do not modify or use unauthorised substitute parts.
- This product has been designed and intended for indoor residential use only. It is not suitable for commercial or outdoor use.
- This product is not intended to be used as part of a health care plan. Consult your medical professional before operating if you are taking medication or have physical limitations.

 
Electrical Instructions

- Never force the back or footrest to close faster than the electric motor.
- Before commencing cleaning or maintenance, ensure this product is disconnected from the power outlet and the back is in the full upright position.
- Disconnect this product from the power outlet before moving.
- Cease operation and disconnect from the power outlet if you ever detect a burning odour or smoke coming from the product.
- Do not operate this product if liquid spillage occurs on or around it. Disconnect from the power outlet and allow product to completely dry before reconnecting.
- Do not operate the power functions or charge station with wet hands.
- Check the condition of the power cord, electrical cords, transformer, plug and connector on a monthly basis. Do not operate if wear is visible on any components.
- Ensure the power cord, electrical cords and transformer are clear of moving parts and not trapped underneath the base.
- Position the power cord to minimise a tripping hazard.
- Never attempt to open or disassemble electrical components.
- We recommend the use of a surge protector (not included).
- Connect power supplies directly to a wall outlet wherever possible. If a powerboard is required, check its maximum power load and don't exceed. Never "daisy-chain" more than one powerboard together.
- Make sure all plugs are connected before plugging the power supply into a power outlet.
- The USB ports (where applicable) are designed with working voltage of 5V, and can not be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer into the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.

Step 1


Remove all packaging and set aside in a safe location before disposal or recycling of applicable materials.

On the underside of the sofa there are packages containing the power supplies - cut the ties to remove the packaging and set the power supplies aside.

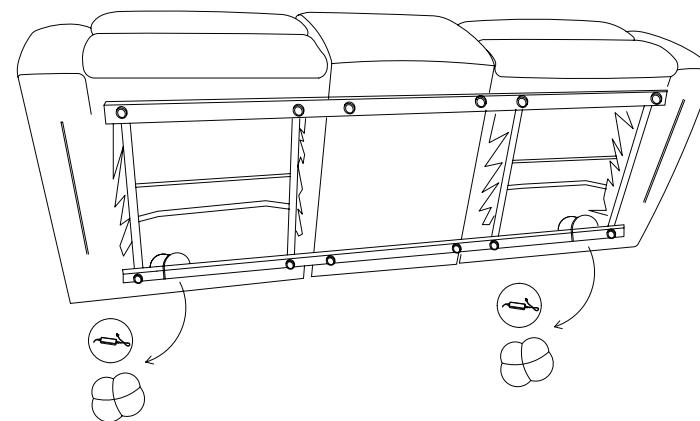

Step 2

 Identify the backrests for the left-hand side, centre and right-hand side - and place them facing down on the seat bases.

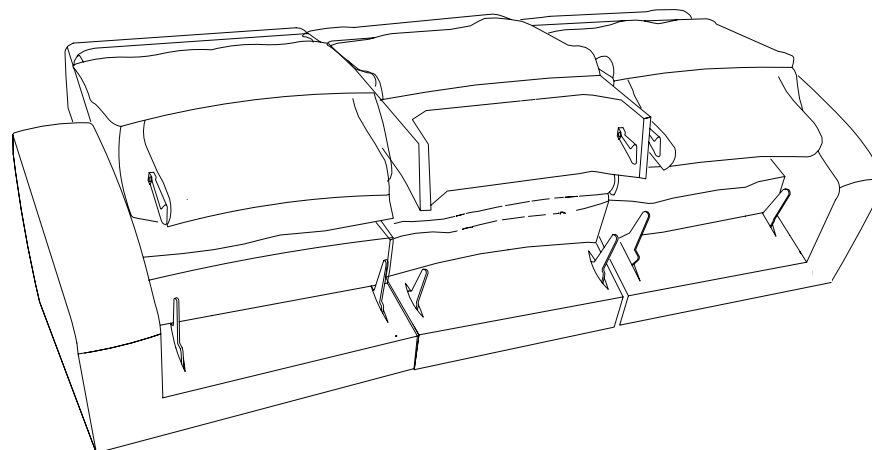


Step 3

Lift each backrest individually to align the metal receivers with the metal posts of the chair base. Allow the posts to slide into the receivers and press down firmly on the top of the backrest until a click is heard on each side.




 Scan QR code for a video of this step

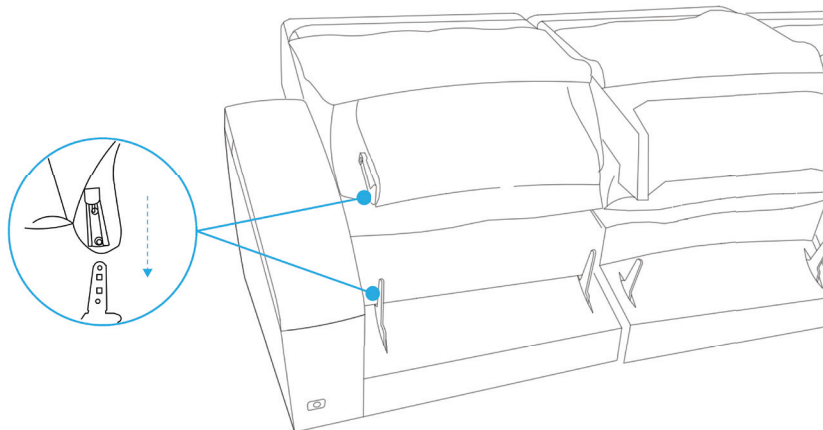

Step 4

 Make the electrical connections per the below diagram:

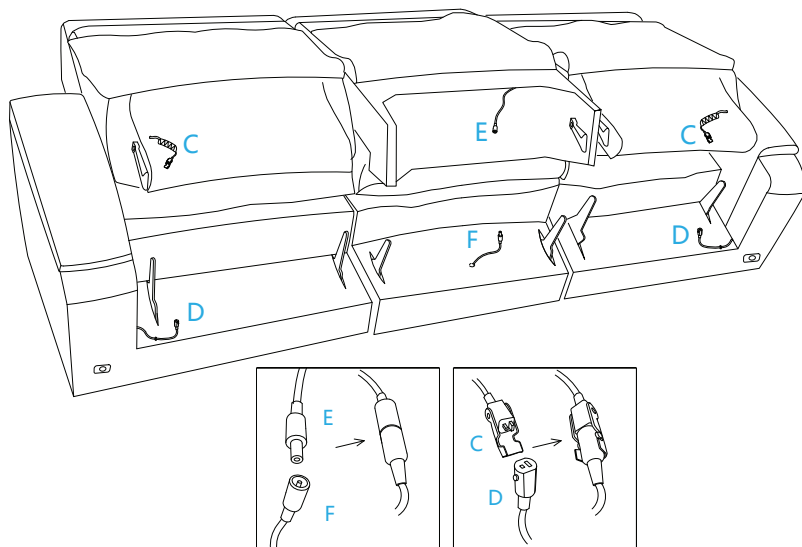

Step 5

Plug the power supplies into the outlets located at the bottom of the seat base, and plug into a wall outlet.

 
Please ensure you have read the safety and electrical instructions before operating.

- ① Make sure all plugs are connected on the product before plugging the power cords into a wall outlet - otherwise product damage may occur. The USB ports (where applicable) are designed with working voltage of 5V and can NOT be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer to the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.

Step 6

Take the backrest wings & slide onto the sides of the left and right backrests using the interlocking brackets.

Your lounge assembly is now complete.

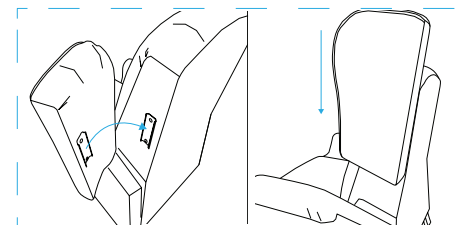

CONTROL PANEL OPERATING INSTRUCTIONS

FOR AUTO-GLIDING MODEL

Recline buttons

 
Press and hold to recline or upright the chair.
Release button when desired position is found

Home button

Press and hold to return the chair to upright sitting position. Use of home button will stop auto-gliding motion

Glider button

Press to turn on the auto gliding function.
Press to cycle through 3 speed settings,
or hold for 1.5 seconds to turn off.
Auto-off after 30 minutes

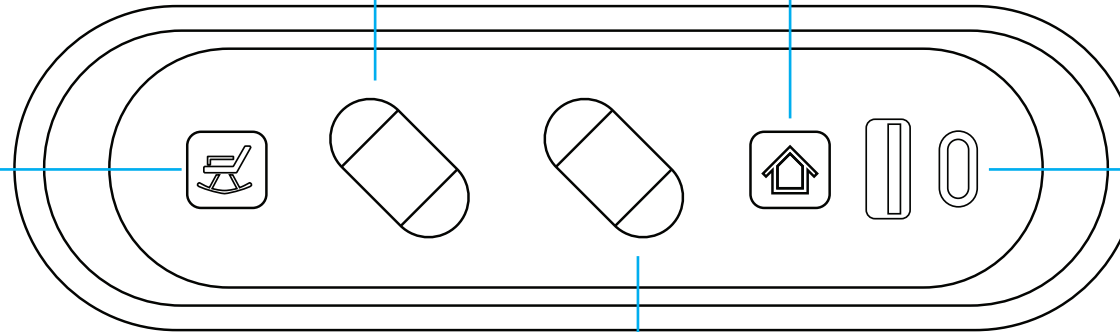

USB Outlets

Used to charge small devices such as smartphones and tablets

Headrest buttons

Press and hold to adjust the angle of the headrest.
Release button when desired position is found



 
Child lock function

Press and hold the Glider button and Home button together for 3 seconds to lock the control panel buttons from input. Press and hold again to unlock. USB and light functions will still work while locked as they do not require moving parts

FOR STANDARD MODEL

USB Outlets

Used to charge small devices such as smartphones and tablets

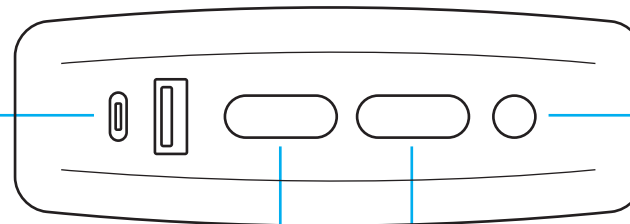

Home button

 
Press and hold to return the chair to upright sitting position. Use of home button will stop auto-gliding motion

Recline buttons

Press and hold to recline or upright the chair.
Release button when desired position is found

Headrest buttons

Press and hold to adjust the angle of the headrest.
Release button when desired position is found

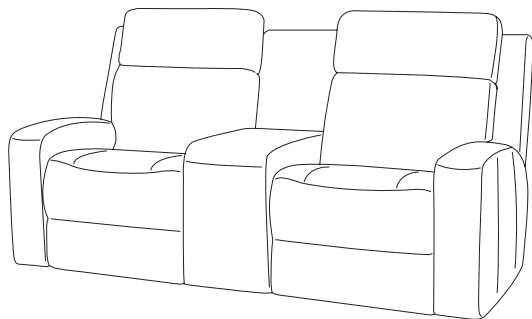

Flint 2 Seater Lounge

⚠ The components are heavy, assembly should be performed by two people.

If you have any difficulty with assembly or operation, please contact the store of purchase in the first instance.

Please read the below safety & electrical instructions before operating

Safety Instructions

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Ensure there is no person, animal or item obstructing the area under the footrest before operating this product.
- Improper use or installation may result in the risk of fire, electric shock and/or injury. We assume no liability for any eventual damages caused by improper use or inappropriate handling, or by any other non-compliance with the instructions in this manual.
- Children should be supervised to ensure that they do not play with the product.
- This product contains moving parts. Keep fingers, hair and body parts well clear from moving parts. To reduce the risk of injury, keep children and pets clear of the product when in use.
- Do not sit or place additional weight on the arms, back or open footrest.
- This product is very heavy. Only move this product by lifting the main body. Never drag by the footrest, back or arm rest.
- Return this product to the full upright position to stand safely and prevent a tripping hazard.
- Do not operate this product if damage is visible in any form.
- Do not modify or use unauthorised substitute parts.
- This product has been designed and intended for indoor residential use only. It is not suitable for commercial or outdoor use.
- This product is not intended to be used as part of a health care plan. Consult your medical professional before operating if you are taking medication or have physical limitations.

Electrical Instructions

- Never force the back or footrest to close faster than the electric motor.
- Before commencing cleaning or maintenance, ensure this product is disconnected from the power outlet and the back is in the full upright position.
- Disconnect this product from the power outlet before moving.
- Cease operation and disconnect from the power outlet if you ever detect a burning odour or smoke coming from the product.
- Do not operate this product if liquid spillage occurs on or around it. Disconnect from the power outlet and allow product to completely dry before reconnecting.
- Do not operate the power functions or charge station with wet hands.
- Check the condition of the power cord, electrical cords, transformer, plug and connector on a monthly basis. Do not operate if wear is visible on any components.
- Ensure the power cord, electrical cords and transformer are clear of moving parts and not trapped underneath the base.
- Position the power cord to minimise a tripping hazard.
- Never attempt to open or disassemble electrical components.
- We recommend the use of a surge protector (not included).
- Connect power supplies directly to a wall outlet wherever possible. If a powerboard is required, check its maximum power load and don't exceed. Never "daisy-chain" more than one powerboard together.
- Make sure all plugs are connected before plugging the power supply into a power outlet.
- The USB ports (where applicable) are designed with working voltage of 5V, and can not be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer into the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.

 
Synargy is a registered responsible supplier on EESS. Electrical components within our products have been tested to comply with legal requirements imposed for electrical safety and EMC.

For product care, information and warranty details please visit www.synargy.com

Step 1


Remove all packaging and set aside in a safe location before disposal or recycling of applicable materials.

On the underside of the sofa there are packages containing the power supplies and the console back - cut the ties to remove the packaging and set these items aside.

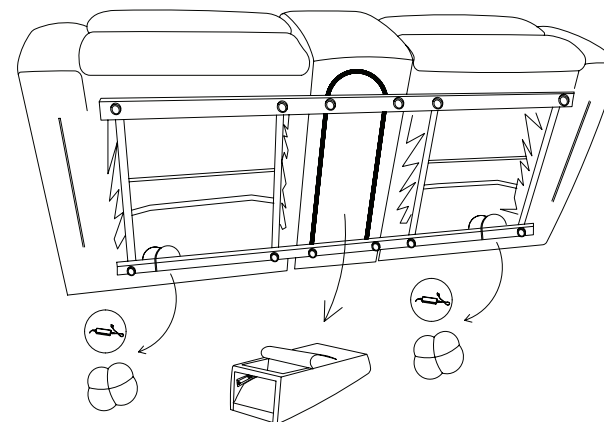

Step 2

 Identify the backrests for the left-hand and right-hand side, plus the console - and place them facing down on the seat bases.

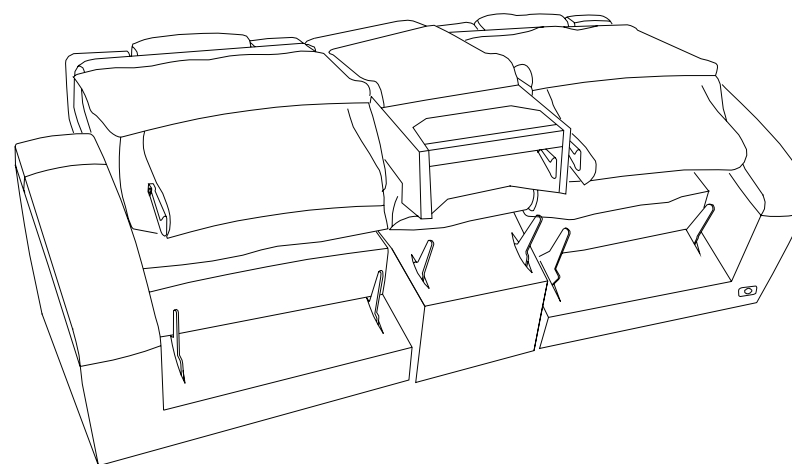


Step 3

Lift each backrest individually to align the metal receivers with the metal posts of the chair base. Allow the posts to slide into the receivers and press down firmly on the top of the backrest until a click is heard on each side.

Repeat also for the console.




 Scan QR code for a video of this step

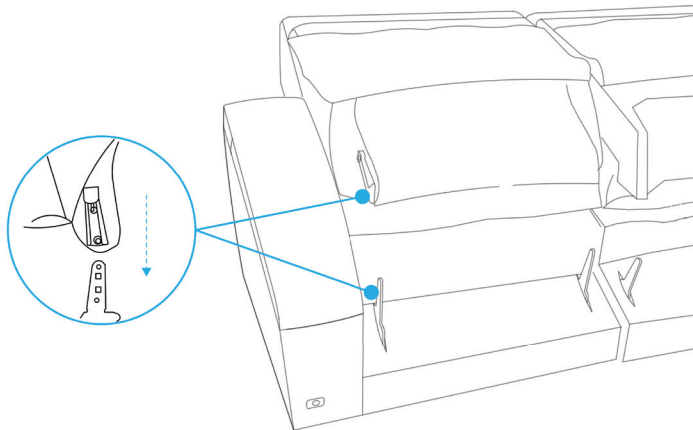

Step 4

 Make the electrical connections per the below diagram:

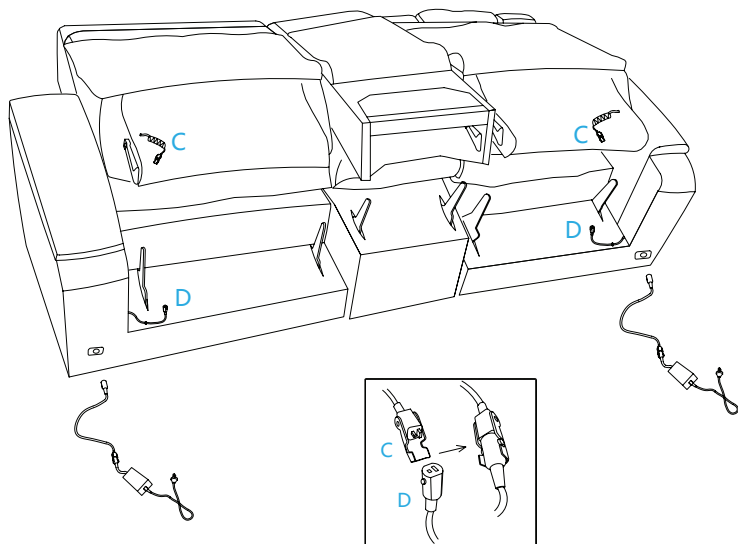

Step 5

Plug the power supplies into the outlets located at the bottom of the seat base, and plug into a wall outlet.

 
Please ensure you have read the safety and electrical instructions before operating.

- ① Make sure all plugs are connected on the product before plugging the power cords into a wall outlet - otherwise product damage may occur. The USB ports (where applicable) are designed with working voltage of 5V and can NOT be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer to the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.

Step 6

Take the backrest wings & slide onto the sides of the left and right backrests using the interlocking brackets.

Your lounge assembly is now complete.

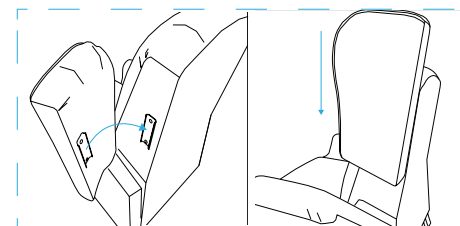

CONTROL PANEL OPERATING INSTRUCTIONS

FOR AUTO-GLIDING MODEL

Recline buttons

 
Press and hold to recline or upright the chair.
Release button when desired position is found

Home button

Press and hold to return the chair to upright sitting position. Use of home button will stop auto-gliding motion

Glider button

Press to turn on the auto gliding function.
Press to cycle through 3 speed settings,
or hold for 1.5 seconds to turn off.
Auto-off after 30 minutes

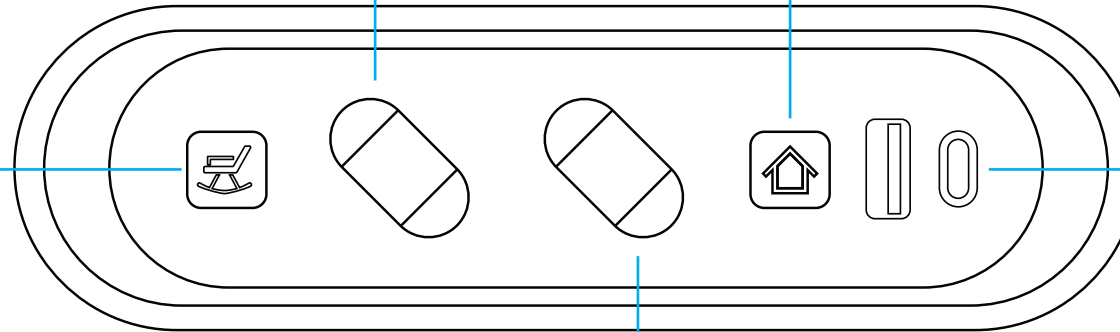

USB Outlets

Used to charge small devices such as smartphones and tablets

Headrest buttons

Press and hold to adjust the angle of the headrest.
Release button when desired position is found



 
Child lock function

Press and hold the Glider button and Home button together for 3 seconds to lock the control panel buttons from input. Press and hold again to unlock. USB and light functions will still work while locked as they do not require moving parts

FOR STANDARD MODEL

USB Outlets

Used to charge small devices such as smartphones and tablets

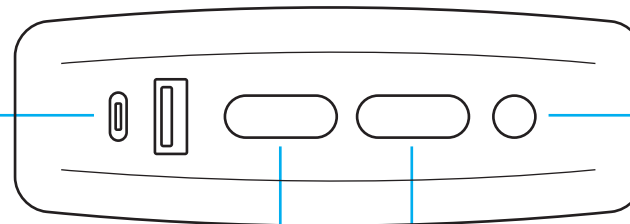

Home button

 
Press and hold to return the chair to upright sitting position. Use of home button will stop auto-gliding motion

Recline buttons

Press and hold to recline or upright the chair.
Release button when desired position is found

Headrest buttons

Press and hold to adjust the angle of the headrest.
Release button when desired position is found

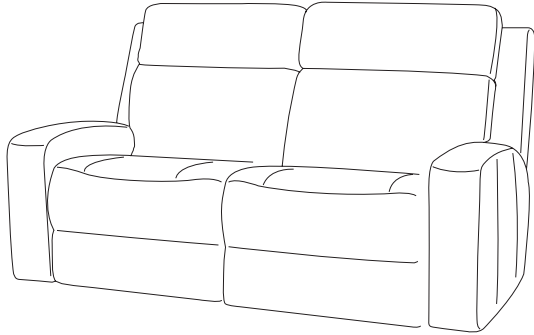

Flint 2 Seater Lounge

⚠ The components are heavy, assembly should be performed by two people.

If you have any difficulty with assembly or operation, please contact the store of purchase in the first instance.

Please read the below safety & electrical instructions before operating

Safety Instructions

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Ensure there is no person, animal or item obstructing the area under the footrest before operating this product.
- Improper use or installation may result in the risk of fire, electric shock and/or injury. We assume no liability for any eventual damages caused by improper use or inappropriate handling, or by any other non-compliance with the instructions in this manual.
- Children should be supervised to ensure that they do not play with the product.
- This product contains moving parts. Keep fingers, hair and body parts well clear from moving parts. To reduce the risk of injury, keep children and pets clear of the product when in use.
- Do not sit or place additional weight on the arms, back or open footrest.
- This product is very heavy. Only move this product by lifting the main body. Never drag by the footrest, back or arm rest.
- Return this product to the full upright position to stand safely and prevent a tripping hazard.
- Do not operate this product if damage is visible in any form.
- Do not modify or use unauthorised substitute parts.
- This product has been designed and intended for indoor residential use only. It is not suitable for commercial or outdoor use.
- This product is not intended to be used as part of a health care plan. Consult your medical professional before operating if you are taking medication or have physical limitations.

 
Electrical Instructions

- Never force the back or footrest to close faster than the electric motor.
- Before commencing cleaning or maintenance, ensure this product is disconnected from the power outlet and the back is in the full upright position.
- Disconnect this product from the power outlet before moving.
- Cease operation and disconnect from the power outlet if you ever detect a burning odour or smoke coming from the product.
- Do not operate this product if liquid spillage occurs on or around it. Disconnect from the power outlet and allow product to completely dry before reconnecting.
- Do not operate the power functions or charge station with wet hands.
- Check the condition of the power cord, electrical cords, transformer, plug and connector on a monthly basis. Do not operate if wear is visible on any components.
- Ensure the power cord, electrical cords and transformer are clear of moving parts and not trapped underneath the base.
- Position the power cord to minimise a tripping hazard.
- Never attempt to open or disassemble electrical components.
- We recommend the use of a surge protector (not included).
- Connect power supplies directly to a wall outlet wherever possible. If a powerboard is required, check its maximum power load and don't exceed. Never "daisy-chain" more than one powerboard together.
- Make sure all plugs are connected before plugging the power supply into a power outlet.
- The USB ports (where applicable) are designed with working voltage of 5V, and can not be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer into the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.

Step 1


Remove all packaging and set aside in a safe location before disposal or recycling of applicable materials.

On the underside of the sofa there are packages containing the power supplies - cut the ties to remove the packaging and set these items aside.

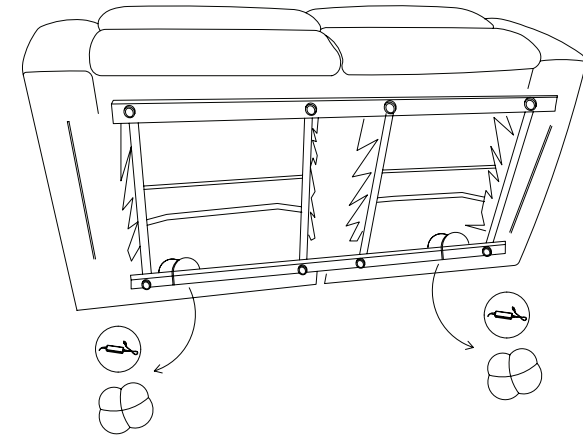

Step 2

 Identify the backrests for the left-hand and right-hand side - and place them facing down on the seat bases.

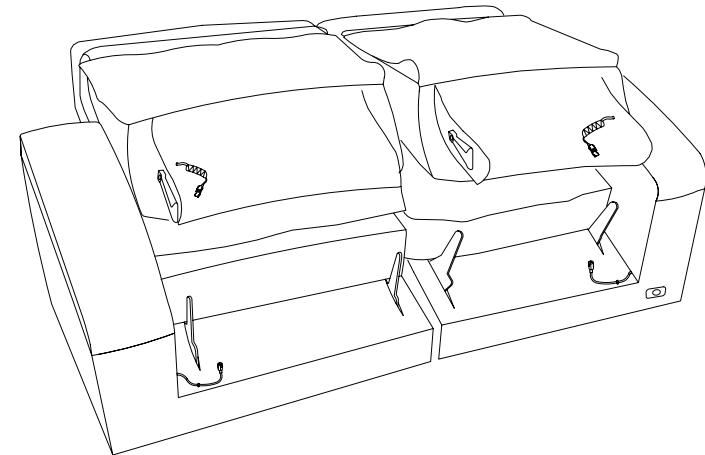


Step 3

Lift each backrest individually to align the metal receivers with the metal posts of the chair base. Allow the posts to slide into the receivers and press down firmly on the top of the backrest until a click is heard on each side.




 Scan QR code for a video of this step

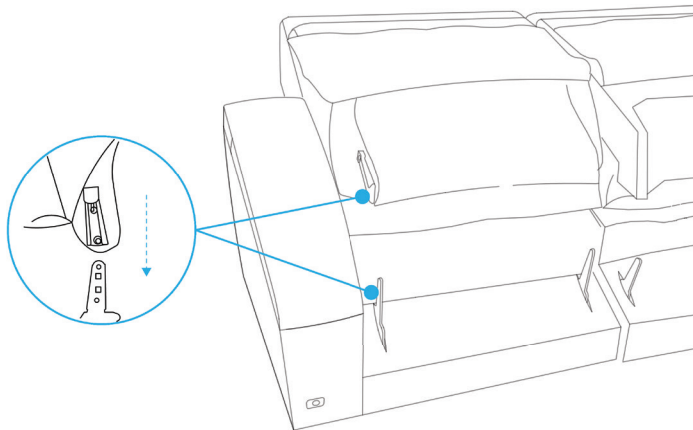

Step 4

 Make the electrical connections per the below diagram:

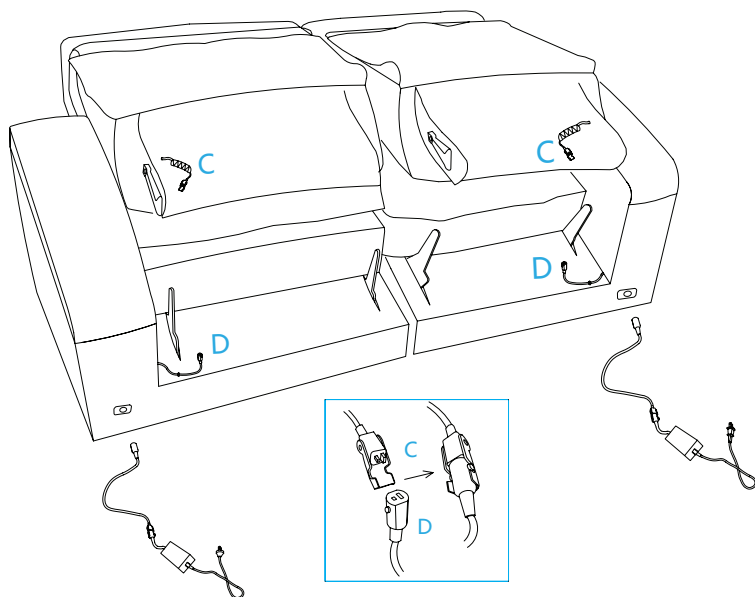

Step 5

Plug the power supplies into the outlets located at the bottom of the seat base, and plug into a wall outlet.

 
Please ensure you have read the safety and electrical instructions before operating.

- ① Make sure all plugs are connected on the product before plugging the power cords into a wall outlet - otherwise product damage may occur. The USB ports (where applicable) are designed with working voltage of 5V and can NOT be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer to the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.

Step 6

Take the backrest wings & slide onto the sides of the left and right backrests using the interlocking brackets.

Your lounge assembly is now complete.

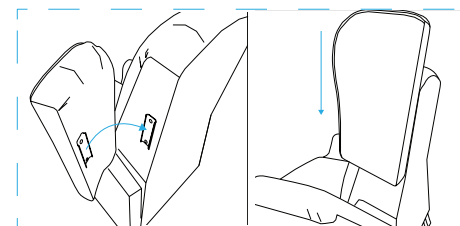

CONTROL PANEL OPERATING INSTRUCTIONS

FOR AUTO-GLIDING MODEL

Recline buttons

 
Press and hold to recline or upright the chair.
Release button when desired position is found

Home button

Press and hold to return the chair to upright sitting position. Use of home button will stop auto-gliding motion

Glider button

Press to turn on the auto gliding function.
Press to cycle through 3 speed settings,
or hold for 1.5 seconds to turn off.
Auto-off after 30 minutes

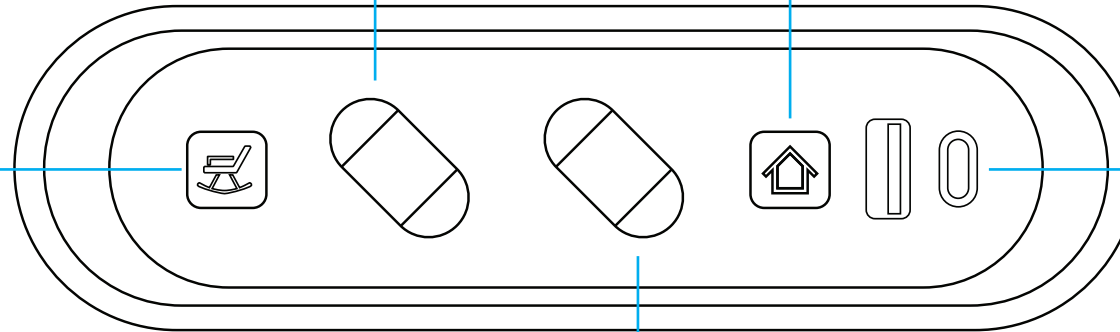

USB Outlets

Used to charge small devices such as smartphones and tablets

Headrest buttons

Press and hold to adjust the angle of the headrest.
Release button when desired position is found



 
Child lock function

Press and hold the Glider button and Home button together for 3 seconds to lock the control panel buttons from input. Press and hold again to unlock. USB and light functions will still work while locked as they do not require moving parts

FOR STANDARD MODEL

USB Outlets

Used to charge small devices such as smartphones and tablets

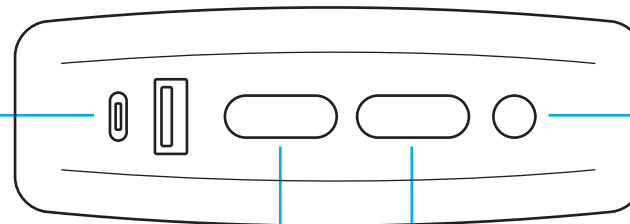

Home button

 
Press and hold to return the chair to upright sitting position. Use of home button will stop auto-gliding motion

Recline buttons

Press and hold to recline or upright the chair.
Release button when desired position is found

Headrest buttons

Press and hold to adjust the angle of the headrest.
Release button when desired position is found

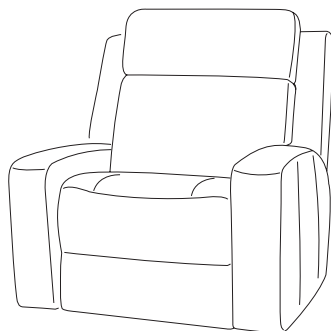

Flint Recliner Chair

⚠ The components are heavy, assembly should be performed by two people.

If you have any difficulty with assembly or operation, please contact the store of purchase in the first instance.

Please read the below safety & electrical instructions before operating

Safety Instructions

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Ensure there is no person, animal or item obstructing the area under the footrest before operating this product.
- Improper use or installation may result in the risk of fire, electric shock and/or injury. We assume no liability for any eventual damages caused by improper use or inappropriate handling, or by any other non-compliance with the instructions in this manual.
- Children should be supervised to ensure that they do not play with the product.
- This product contains moving parts. Keep fingers, hair and body parts well clear from moving parts. To reduce the risk of injury, keep children and pets clear of the product when in use.

- Do not sit or place additional weight on the arms, back or open footrest.
- This product is very heavy. Only move this product by lifting the main body. Never drag by the footrest, back or arm rest.
- Return this product to the full upright position to stand safely and prevent a tripping hazard.
- Do not operate this product if damage is visible in any form.
- Do not modify or use unauthorised substitute parts.
- This product has been designed and intended for indoor residential use only. It is not suitable for commercial or outdoor use.
- This product is not intended to be used as part of a health care plan. Consult your medical professional before operating if you are taking medication or have physical limitations.

Electrical Instructions

- Never force the back or footrest to close faster than the electric motor.
- Before commencing cleaning or maintenance, ensure this product is disconnected from the power outlet and the back is in the full upright position.
- Disconnect this product from the power outlet before moving.
- Cease operation and disconnect from the power outlet if you ever detect a burning odour or smoke coming from the product.
- Do not operate this product if liquid spillage occurs on or around it. Disconnect from the power outlet and allow product to completely dry before reconnecting.
- Do not operate the power functions or charge station with wet hands.
- Check the condition of the power cord, electrical cords, transformer, plug and connector on a monthly basis. Do not operate if wear is visible on any components.
- Ensure the power cord, electrical cords and transformer are clear of moving parts and not trapped underneath the base.

- Position the power cord to minimise a tripping hazard.
- Never attempt to open or disassemble electrical components.
- We recommend the use of a surge protector (not included).
- Connect power supplies directly to a wall outlet wherever possible. If a powerboard is required, check its maximum power load and don't exceed. Never "daisy-chain" more than one powerboard together.
- Make sure all plugs are connected before plugging the power supply into a power outlet.
- The USB ports (where applicable) are designed with working voltage of 5V, and can not be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer into the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.

 
Synargy is a registered responsible supplier on EESS. Electrical components within our products have been tested to comply with legal requirements imposed for electrical safety and EMC.

For product care, information and warranty details please visit www.synargy.com

Step 1

Remove all packaging and set aside in a safe location before disposal or recycling of applicable materials.

On the underside of the seat base there is a package containing the power supply - cut the ties to remove the packaging and set the power supply aside.

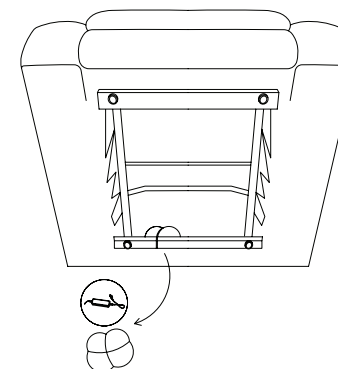

Step 2

 
Place the backrest facing down on the seat base.

Then, lift the backrest to align the metal receivers with the metal posts of the chair base. Allow the posts to slide into the receivers and press down firmly on the top of the backrest until a click is heard on each side.

Make the electrical connection as below diagram:



Scan QR code for a video of this step

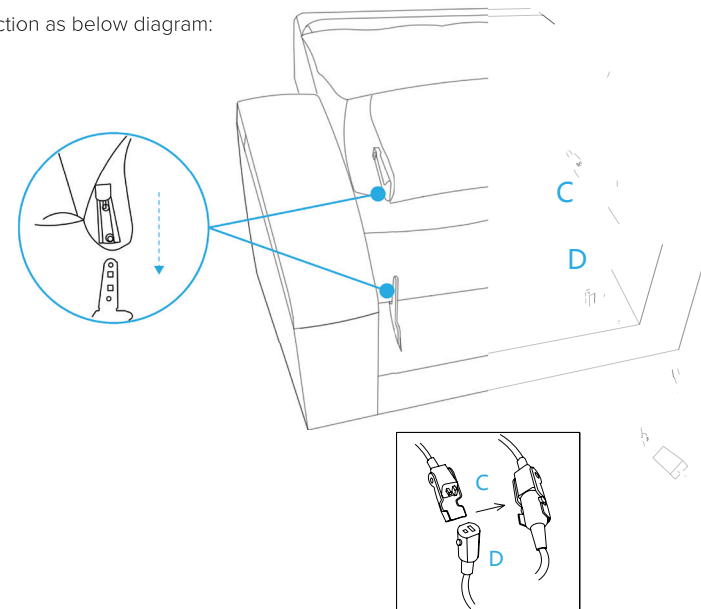

Step 3

Plug the power supply into the outlet located at the bottom of the seat bases, and plug into a wall outlet.

 
Please ensure you have read the safety and electrical instructions before operating.

- ⚠ Make sure all plugs are connected on the product before plugging the power cords into a wall outlet - otherwise product damage may occur. The USB ports (where applicable) are designed with working voltage of 5V and can NOT be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer to the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.

Step 4

Take the backrest wings & slide onto the sides of the backrest using the interlocking brackets.

Your lounge assembly is now complete.

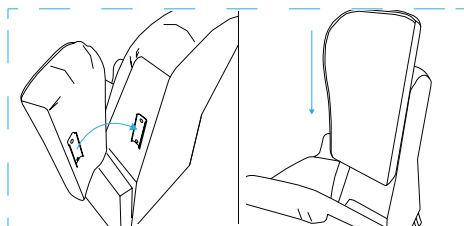

CONTROL PANEL OPERATING INSTRUCTIONS

 
FOR AUTO-GLIDING MODEL

Recline buttons

Press and hold to recline or upright the chair. Release button when desired position is found

Home button

Press and hold to return the chair to upright sitting position. Use of home button will stop auto-gliding motion

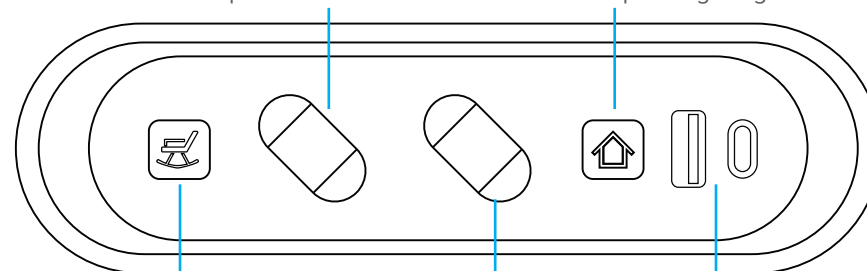

Glider button

Press to turn on the auto gliding function.
Press to cycle through 3 speed settings, or hold for 1.5 seconds to turn off.
Auto-off after 30 minutes

USB Outlets

Used to charge small devices such as smartphones and tablets

Headrest buttons

Press and hold to adjust the angle of the headrest.
Release button when desired position is found



Child lock function

Press and hold together for 3 seconds to lock or unlock buttons. USB and light functions will still work while locked as they do not require moving parts

 
FOR STANDARD MODEL

USB Outlets

Used to charge small devices such as smartphones and tablets

Home button

Press and hold to return the chair to upright sitting position. Use of home button will stop auto-gliding motion

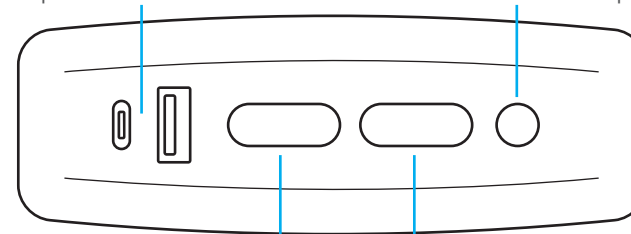

Recline buttons

Press and hold to recline or upright the chair. Release button when desired position is found

Headrest buttons

Press and hold to adjust the angle of the headrest. Release button when desired position is found