



ASSEMBLY INSTRUCTIONS

JOY NURSERY CHAIR 2499-83PHR



Joy Nursery Chair

ⓘ The components are heavy, assembly should be performed by two people.

If you have any difficulty with assembly or operation, please contact the store of purchase in the first instance. Please read the below safety & electrical instructions before operating

Safety Instructions

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Ensure there is no person, animal or item obstructing the area under the footrest before operating this product.
- Improper use or installation may result in the risk of fire, electric shock and/or injury. We assume no liability for any eventual damages caused by improper use or inappropriate handling, or by any other non-compliance with the instructions in this manual.
- Children should be supervised to ensure that they do not play with the product.
- This product contains moving parts. Keep fingers, hair and body parts well clear from moving parts. To reduce the risk of injury, keep Children and pets clear of the product when in use.
- Do not sit or place additional weight on the arms, back or open footrest.
- This product is very heavy. Only move this product by lifting the main body. Never drag by the footrest, back or arm rest.
- Return this product to the full upright position to stand safely and prevent a tripping hazard.
- Do not operate this product if damage is visible in any form.
- Do not modify or use unauthorised substitute parts.
- This product has been designed and intended for indoor residential use only. It is not suitable for commercial or outdoor use.
- This product is not intended to be used as part of a health care plan. Consult your medical professional before operating if you are taking medication or have physical limitations.

Electrical Instructions


- Never force the back or footrest to close faster than the electric motor.
- Before commencing cleaning or maintenance, ensure this product is disconnected from the power outlet and the back is in the full upright position.
- Disconnect this product from the power outlet before moving.
- Cease operation and disconnect from the power outlet if you ever detect a burning odour or smoke coming from the product.
- Do not operate this product if liquid spillage occurs on or around it. Disconnect from the power outlet and allow product to completely dry before reconnecting.
- Do not operate the power functions or charge station with wet hands.
- Check the condition of the power cord, electrical cords, transformer, plug and connector on a monthly basis. Do not operate if wear is visible on any components.
- Ensure the power cord, electrical cords and transformer are clear of moving parts and not trapped underneath the base.
- Position the power cord to minimise a tripping hazard.
- Never attempt to open or disassemble electrical components.
- We recommend the use of a surge protector (not included).
- Connect power supplies directly to a wall outlet wherever possible. If a powerboard is required, check its maximum power load and don't exceed. Never "daisy-chain" more than one powerboard together.
- Make sure all plugs are connected before plugging the power supply into a power outlet.
- The USB ports (where applicable) are designed with working voltage of 5V, and can not be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer into the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.

Synargy is a registered responsible supplier on EESS. Electrical components within our products have been tested to comply with legal requirements imposed for electrical safety and EMC.

For product care, information and warranty details please visit www.synargy.com

Step 1


Remove all packaging and set aside in a safe location before disposal or recycling of applicable materials. On the metal post at the back of the seat base is a package containing the power supply cables, remove this and set aside for a later step.

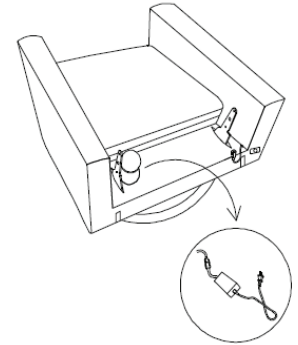

Step 2

Lift the back rest to align the metal receivers with the metal posts of the chair base.

Allow the posts to slide into the receivers, and press down firmly on the top of the backrest until a click is heard on each side.

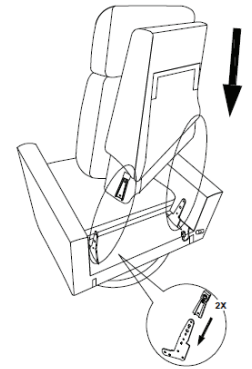


Scan QR code for a video of this step

Step 3

Locate the power cables between the backrest and seat base, and connect them firmly.


Lastly, connect the power supply into the outlet at the bottom of the chair base and connect directly to a wall outlet.

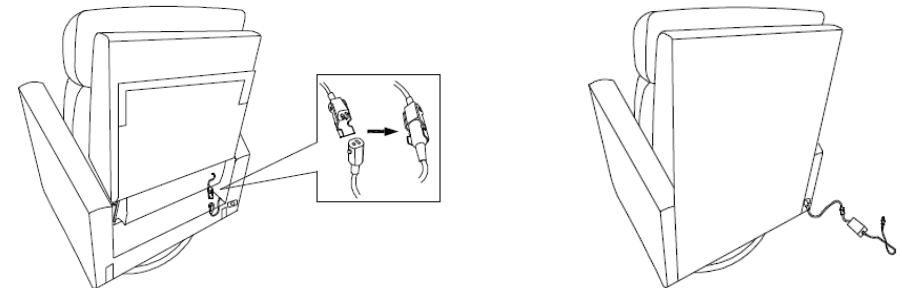

Hand Controller Operation

The **headrest buttons** can be pressed to adjust the angle of the headrest to your preference

The **home button** can be held down to restore the headrest, backrest and footrest all back to their default positions

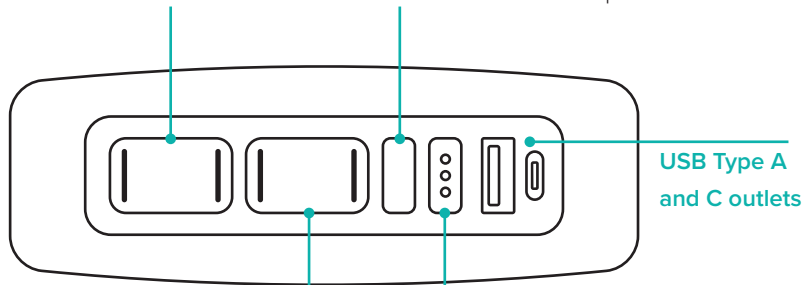


The **recliner buttons** can be pressed to adjust the angle of the footrest and backrest to your preference

The **light button** can be pressed to adjust between 3 brightness settings of the night light, or off. (Lights turn off after 30 minutes)

Child Lock Function:

Press and hold the end headrest and recliner buttons together for 3 seconds, and a beep will sound to signal that all buttons are protected with the child lock function.

Press and hold again to unlock.

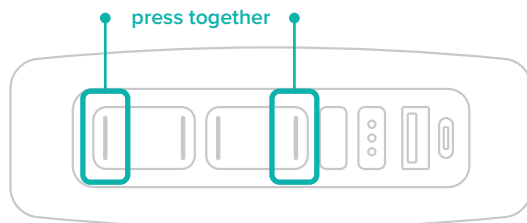


Adjustable Headrest

The sides of the headrest can also be adjusted to further improve support.

Gently pull the sides and release when in the desired position.


Push backward to reset to the standard flat setting.

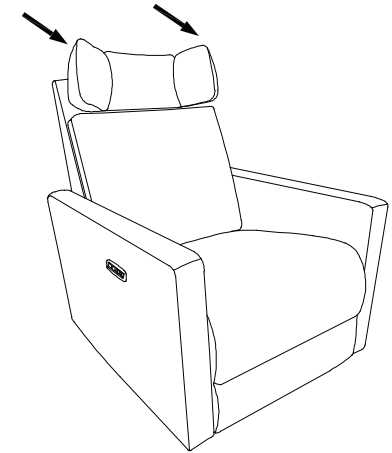

Safety Stop System on Reclining Footrest

The Joy nursery chair is equipped with a recliner safety strip. When the strip detects obstruction, the reclining action stops and retreats, reducing the risk of an object being caught.

If your recliner won't shut, please ensure the area underneath is free from objects which may be triggering this safety feature.

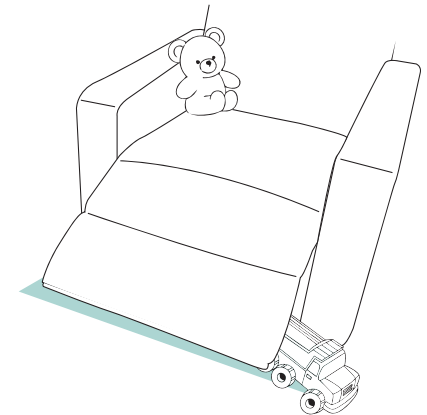

This nursery chair is equipped with a safety stop mechanism as an additional precautionary measure; however, it is not a replacement for proper and continuous supervision of children. The safety strip requires sufficient resistance to activate the safety stop and therefore may not engage under all circumstances. Users are advised to exercise caution at all times and ensure that children and pets are kept clear of the mechanism.